

Updating NGS Drivers

9 April, 2009

From time to time, Radiant will make corrections to the drivers the run the tester from the host computer and to the HEX files that control the tester microprocessors. These changes will take place more often than Vision itself will change. The UPDATE_Drivers executable will load the newer files into the correct location on your disk. Vision will find them and use them the next time it starts up.

IMPORTANT: DO NOT USE THE “DRIVER UPDATE” CD IF YOU ARE INSTALLING VISION FOR THE FIRST TIME.

STEP 1 -> Update the HEX files

1. Execute “UPDATE_Drivers” on the CD.

STEP 2 -> Update the Drivers:

1. If you have Windows 2000 operating system on your computer, execute the program

“UPDATE_W2000”

Else

2. If you have Windows XP or Windows Vista operating system on your computer, execute the program

“UPDATE_XP_Vista”

STEP 3 -> Execute Vision

1. Vision will automatically find and use the updated files.

Windows 2000, Windows XP, and Vista are trademarks of Microsoft Corporation.